



Application - News

N°798 COAST series

1. Differentiation of leather and plastic interior components

Leather and plastic interior parts should be differentiated. For this purpose, a color-gloss-structure sensor type **COAST-56-45°-VIS-IR4** is used. At this, the distance of the sensor to the object is approximately 56mm and the detecting range at this distance is around 10mm. The leather and plastic interior components can be proper differentiated as shown in the screen shots.

